
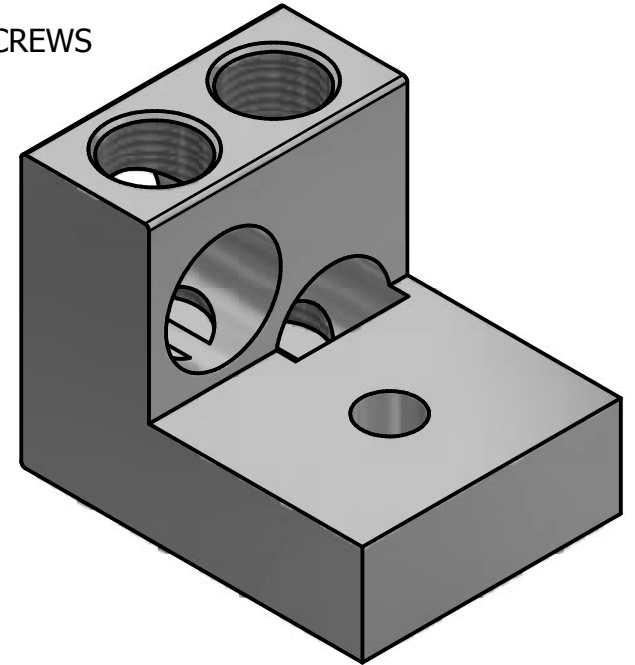


INSTALLED - (2) 1045A-HP SCREWS

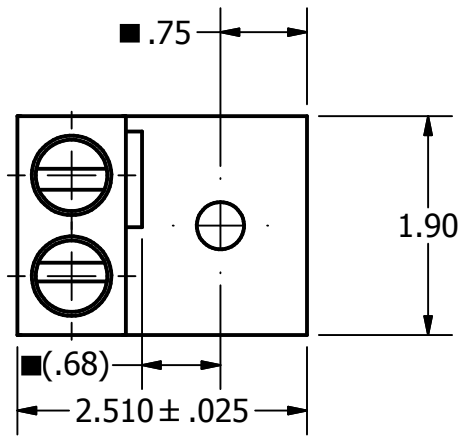


Cat. No. 2SL500 Style No. 3

■ Drill, Enlarge, or Modify Mounting Holes

- 1) Increase hole(s) dia. to 5/8 bolt.
- 2) Move location of mounting hole(s)
- 3) If buying blank lug, put custom hole(s) in.

IHI UL/CSA Installation Guide to Drill or Enlarge Mounting Holes:

<https://lugsdirect.com/PDF%20Documents/IHI-MTG-HOLE-FIELD-MODS-UL&CSA-CERTIFICATIONS.pdf>

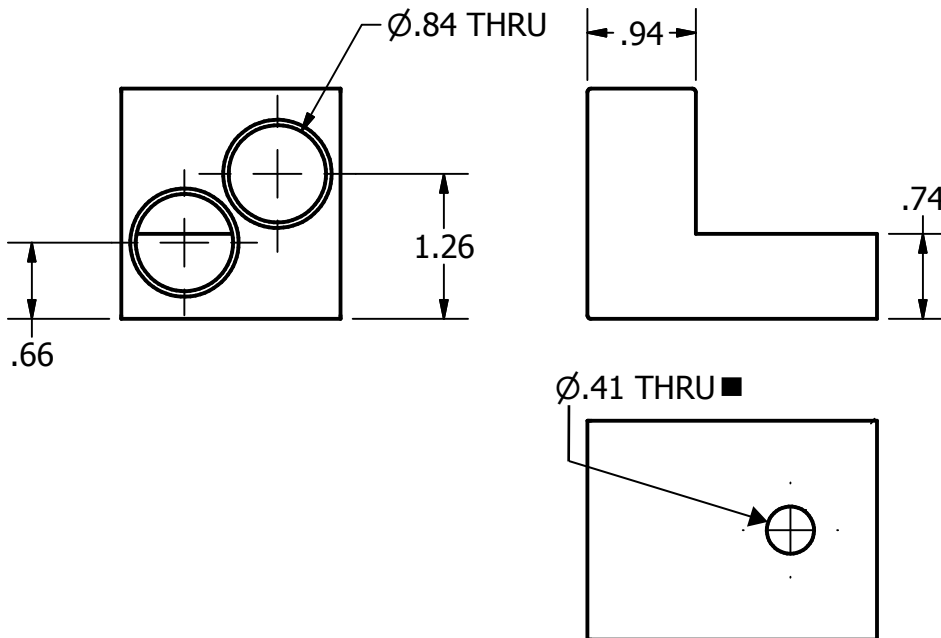

NOT FOR USE WHERE FAILURE CREATES A HAZARD TO HUMAN HEALTH OR SAFETY.
 ALL PRODUCTS ARE SUBJECT TO THIS FULL DISCLAIMER: <http://www.ihiconnectors.com/disclaimer.html>

FOR FURTHER INFORMATION ON THE PROPER USE OF THIS PRODUCT IN SPECIFIC APPLICATIONS SEE
<http://www.ihiconnectors.com/GuideToFlexFlexibleFineStrandedWireCableMechanicalLugsFAQ.html>

<http://www.ihiconnectors.com/Technical-Data-Installation.htm>

<small>THIS DRAWING AND DESIGN ARE THE PROPERTY OF INTERNATIONAL HYDRAULICS, INC., CLEVELAND, OHIO, AND MAY NOT BE DUPLICATED, USED FOR THE BASIS OF DESIGN OR MANUFACTURE WITHOUT THE WRITTEN PERMISSION OF INTERNATIONAL HYDRAULICS, INC., CLEVELAND, OHIO.</small>		IHI CONNECTORS INTERNATIONAL HYDRAULICS, INC.	
GENERAL TOLERANCES ±.015 (±0,39)		TITLE: 2LS500-41-75	
MATERIAL: 6061-T6		SIZE: A	DRAWN BY: cridley
FINISH: TIN PLATED		DATE: 6-12-2019	DWG NO.: 2LS500-41-75
		REV: 0	COMPACT WIDTH LUG (SALES)