



IHI UL/CSA Installation Guide to Drill or Enlarge Mounting Holes: https://lugsdirect.com/PDF%20Documents/IHI-MTG-HOLE-FIELD-MODS-UL&CSA-CERTIFICATIONS.pdf

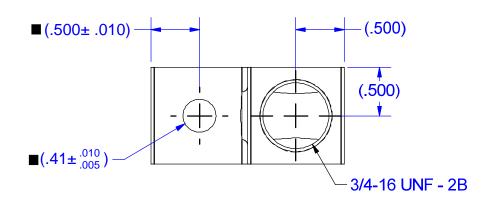

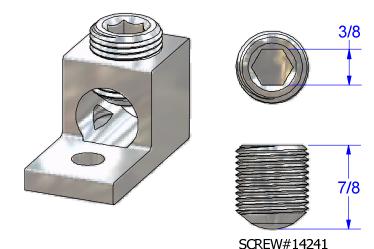

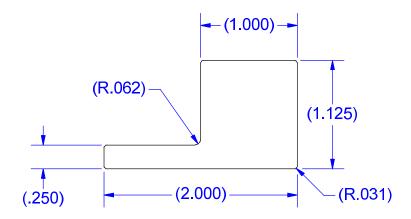

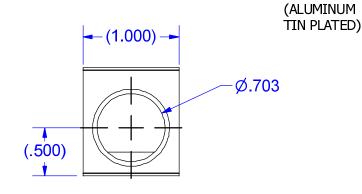

MARKING S350 350 KCMIL-6 CU9AL IHI CSA LOGO UL LOGO

Cat No. S350 Style No. 1

- Drill, Enlarge, or Modify Mounting Holes
- 1) Increase hole(s) dia. to 9/16 bolt
- 2) Move location of mounting hole(s)
- 3) If buying blank lug, put custom hole(s) in.

NOT FOR USE WHERE FAILURE CREATES A HAZARD TO HUMAN HEALTH OR SAFETY. ALL PRODUCTS ARE SUBJECT TO THIS FULL DISCLAIMER: http://www.ihiconnectors.com/disclaimer.html

FOR FURTHER INFORMATION ON THE PROPER USE OF THIS PRODUCT IN SPECIFIC APPLICATIONS SEE http://www.ihiconnectors.com/GuideToFlexFlexibleFineStrandedWireCableMechanicalLugsFAQ.html http://www.ihiconnectors.com/Technical-Data-Installation.htm

FLEX WIRE 262 KCMIL - 4 AWG

	THIS DRAWING AND DESIGN ARE THE PROPERTY OF INTERWITIONAL HYDRALLES, INC. CLEMENT OF THE BASS OF DESIGN OF MANUFACTURE WITHOUT THE WRITTEN PERMISSION OF INTERMATIONAL HYDRALLICS, INC., CLEMEND, CHI.O.	INTERNATIONAL HYDRAULICS, INC.			
		TITLE:	S3	50-41-50	
	GENERAL TOLERANCES ±.015 (±0,038)	CONNECTOR			
	MATERIAL: 6061-T6 (X0010)	SIZE:	DRAWN BY: TDS	DWG NO.: \$350-41-50	REV:
	FINISH:TIN PLATE EMS	DATE: 12/10/08		THIS IS A CAD DRAWING, DO NOT MANUALLY REVISE	